

## INSTRUCTION DATA

PRODUCT: **REMOTE SWIVEL BASE SYSTEM**  
VER: **1.0**  
DATE: **OCTOBER 2006**



## CONFIGURATIONS & OPERATION

### RSB: REMOTE SWIVEL BASE BOLT ON

The swivel mechanism is activated by releasing lever to the vertical position, positioning light where required and returning lever to locked position.

Supplied with: ① x1 RSISLASS, ② x1 RSIRM & ③ x1 BOLT16SS.

### RSBM: REMOTE SWIVEL BASE MAGNETIC

The swivel mechanism is activated by releasing lever, positioning light where required and returning lever to locked position. NOTE: Be careful if mounting to a painted or delicate surface. Ensure the supplied protective pad is placed between magnet and structure to minimise possibility of marking surface.

Supplied with: ① x1 RSISLASS, ② x1 RSIRM & ③ x1 BOLT16SS.

### RSBS: REMOTE SWIVEL BASE SUCTION

The swivel mechanism is activated by releasing lever, positioning light where required and returning lever to locked position. The suction cap is activated by swinging the cam lever into the tensioned position. NOTE: Ensure the surface under the suction cap is clean and smooth to maximise time of adhesion (moisture may be applied to either surface). It is critical to keep the rubber suction pad free of any marks.

To clean wash with copious amounts of water and a clean sponge. NEVER clean with cleaning fluid or solvent

Supplied with: ① x1 RSISLASS, ② x1 RSIRM & ③ x1 BOLT16SS.

## HAND HELD SPOTLIGHT (SL) & REMOTE MOUNTED SPOTLIGHT (RM) INSERTS

There are two types of inserts supplied with the RSB, RSBM and RSBS:

### SL Insert

Supplied already installed

### RM Insert

Supplied as an option with an M10 x 16mm full thread bolt.

### Directions

To fit a Lightforce SL to an RSB, RSBM, RSBS simply screw the Lightforce SL to the already fitted SL insert.

To fit a Lightforce RM to an RSB, RSBM and RSBS simply loosen the locking knob and pull the insert out of the RSB, RSBM and RSBS.

- Replace the standard mounting bolt supplied with the RM light with the shorter M10 x 16mm bolt supplied.
- Mount the light to the RM insert with the shorter M10 x 16mm bolt.
- Install the RM light complete with RM insert into the RSB, RSBM and RSBS.
- Make sure it is seated all the way and then tighten locking knob. Being careful not to overtighten.

